


# *Nasab*

## *External Rewinder*

### *RW-601*

*Art. Nr. 95-50-11.*

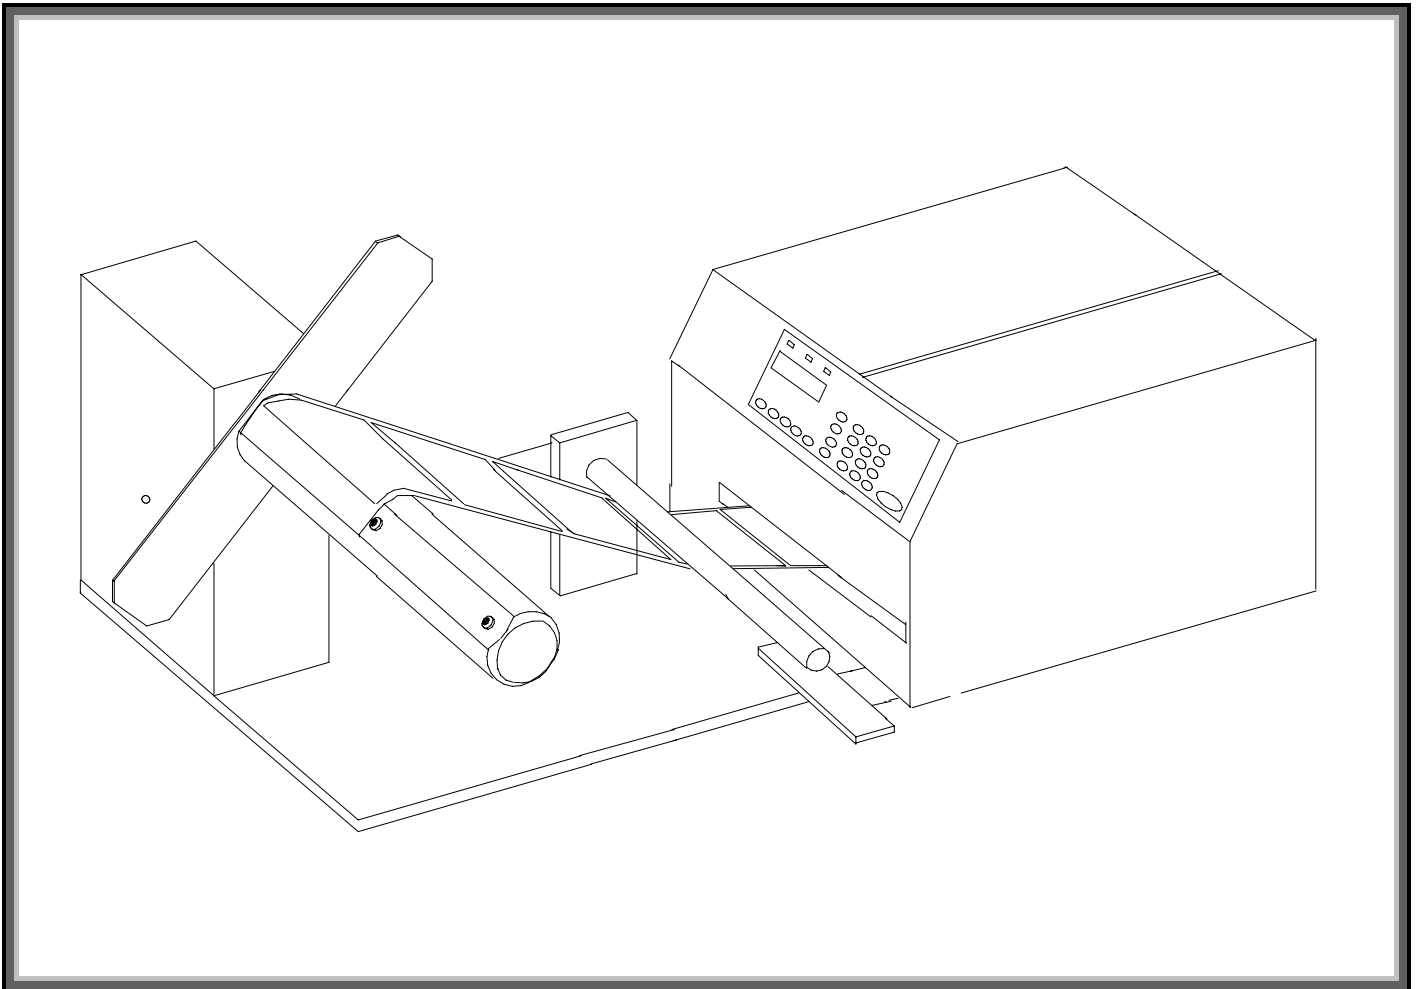

# *Service Manual.*

**Edition 1:1**

**December 1998 - Art. No. 10-50-11**

## INTRODUCTION

---

1. Introduction
2. Connection
3. Adjustment
4. Printing & Rewinding
5. Hints
6. Specification
7. Spares
8. Options
9. Elschema

**Note:**


**18V/AC adapter is normally ordered separately**

**Connection:**

- Put the printer on a table with enough space in front of it.
- Remove the existing front lid from hinges of the printer.
- Fit the rewriter completely into the hinges.
- Connect the Adapter with the cable from the 18V/AC input plug on the rewriter control panel to the power mains socket.
- Let the ON/OFF switch stay in OFF position.

**Adjustment:**

- Load the paper stock and thread the paper web inside the printer.
- Make sure that the roll and the web are properly inserted.
- Check carefully that it goes proper positioned along the paper edge guide or guide washers.
- Check the web is close to the inner guide just beneath the printhead.
- Lower the printhead.
- Switch on the printer and Feed out a length of 40cm of paper.
- Grip the paper in the middle and stretch it and lower it towards bobbin.
- By the four adjustment screws adjust the whole rewriter plate so the left side of the stretched paper is flush to bobbin wing.
- Tighten the screws.

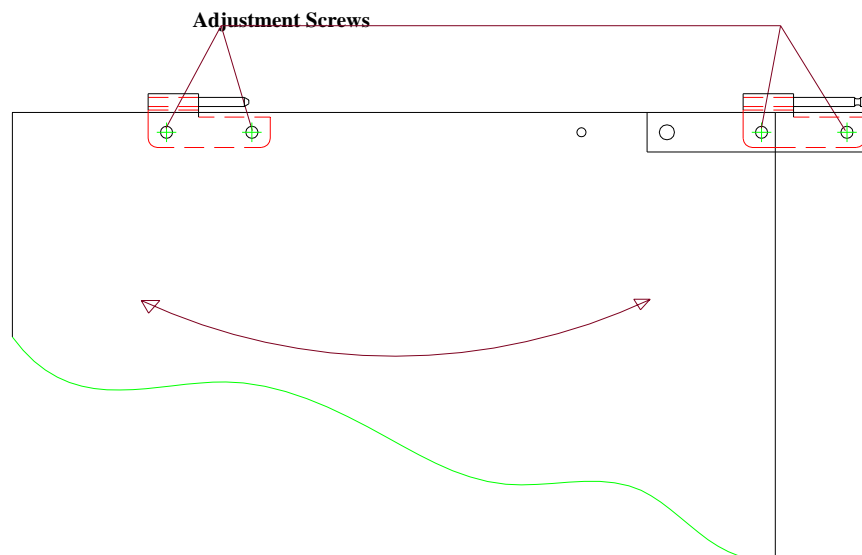


- Insert if necessary Adapter for 76mm (3")bobbin.
- Tighten the screw so it not touching the metal plate on the bobbin.
- Use a full width paper core and insert it to the bobbin.
- Rewind manually a few turns so the paper is rewinded.

**Note:**

- The Bobbin has an adjustable plate. This plate can easily be moved by two screws so it fits the paper core.
- Move always the plate so it is aligned with the bobbin.
- If not a paper core is used there is enough space beneath the plate to insert the the web.
- Adapter for 76mm (3") bobbin has a plastic flap holding the paper core.
- For your information there is a friction clutch inside the rewinder.
- This friction clutch is adjustable by a knurled disk for certain specific rare cases.
- However the rewinder is proper adjusted for all media that printer is designed for.

**Printing & Rewinding:**


- **Only for Rewinder models and Printers with this option.**
- Connect the Signal cable from Cutter Din-plug on the printer front to the signal input plug on the rewinder.
- **Set and let the ON/OFF switch stay in ON position ( 1 ).**

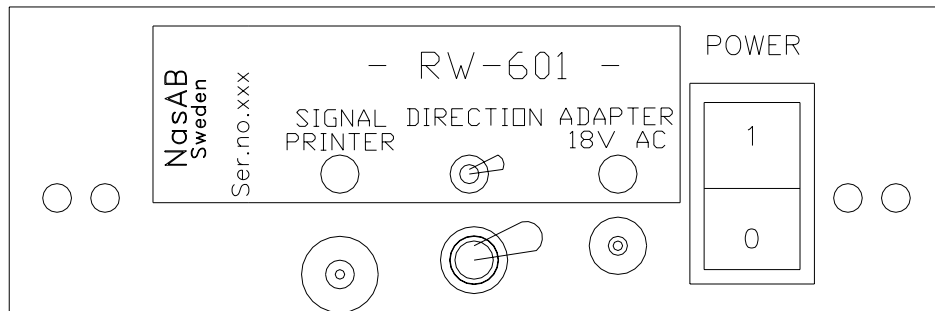

- Prepare the printer so it prints a label. ( a paper feed is not enough). When the printer starts to print the rewinder starts automatically. The rewinder is activated 10 sec after a printout.

**Hints:**

- To get a perfect rewinded roll when printing batches of labels some points are suggested if possible. However the rewinder makes a good job without these proposals.
- In printers Setup use no "negative startadjust", this will avoid retracting the label before printing.
- Check also in the Setup with Normal speed if printer still stops for each label.

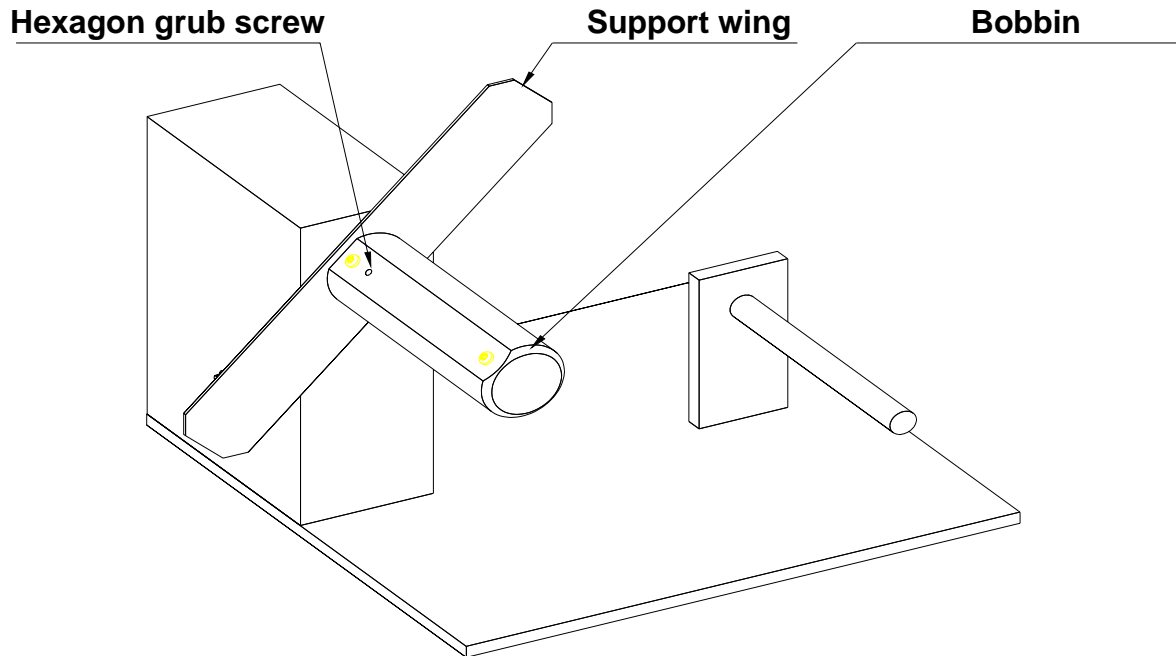



<b>Specification:</b>	Bobbin length,	125mm
	Label roll size,	38-205mm
	Bobbin paper core size,	38-42mm
<b>Dimensions:</b>	L	260mm
	W	250mm
	H	250mm
	Weight	2.7kg
<b>Power:</b>	Supply the Rewinder from separate adapter either 18V/AC 15W, 800mA or 24V DC. (2 pole female chassi plug, length 12mm, outer 5,5mm, inner 2.1mm)	

**Powering from printer is not recommended.**



## Elschema:

### Layout

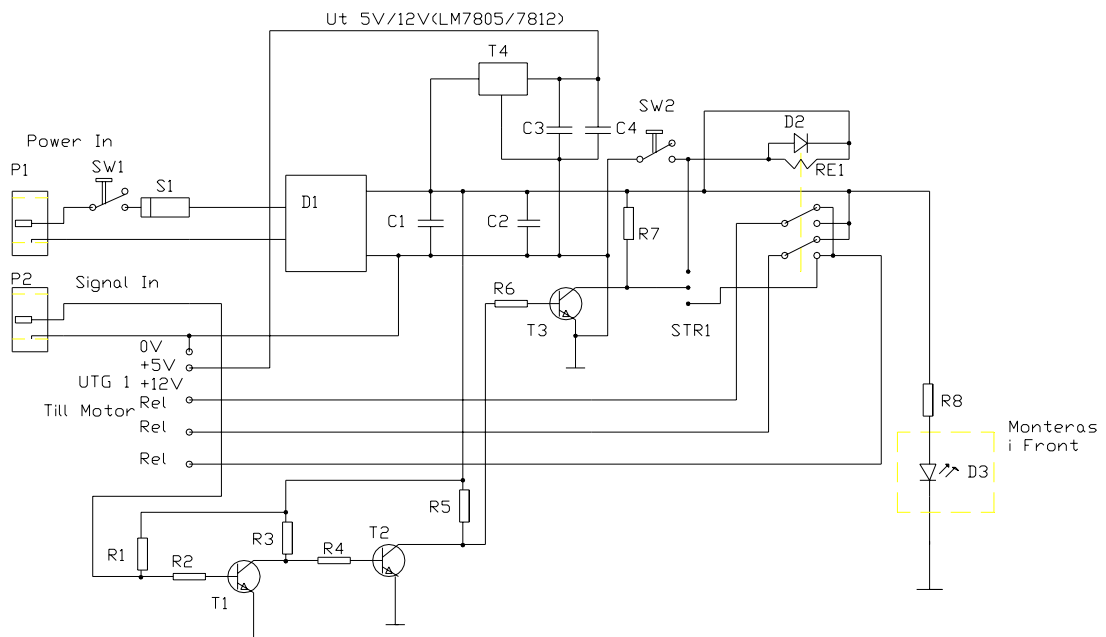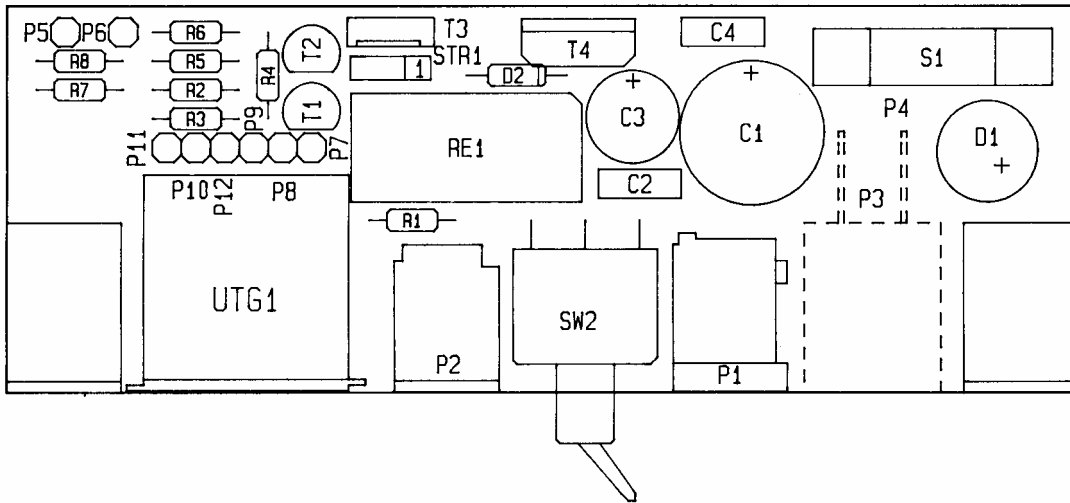

# Nasab

Wichrowa 49  
42 200 Czestochowa  
Poland

Phone: +48(0)34 3654405  
Fax: +48(0)34 3654489  
Email: info@nasab.com